

## Immediate Commands (Rev G Firmware)

Key	Normal	Shift	ALT
F1	Play Message 1	Record	Toggle CWR Mode
F2	Play Message 2	Set WPM Speed	Set Lead-in Delay
F3	Play Message 3	Set ASR/TXMON	Set Tail Delay
F4	Play Message 4	CW Practice	Set Serial Number
F5	Play Message 5	Toggle Farnsworth	Toggle Contest Spacing
F6	Play Message 6	Toggle Sidetone	Modify Keyer Mode
F7	Play Message 7	Toggle XMIT Mute	Toggle Autospace
F8	Play Message 8	Toggle Tune	Modify Output Port
F9	Play Message 9	Quick Speed 1	Swap Paddles
F10	Play Message 10	Quick Speed 2	Adjust 1 <sup>st</sup> Bit Length
F11	Play Message 11	Quick Speed 3	Adjust Weighting
F12	Play Message 12	Quick Speed 4	Beacon Message
↑ UP	N/A	N/A	Sidetone Freq. Up
↓ DOWN	N/A	N/A	Sidetone Freq Down
END	Fast F12 Msg Load	N/A	Set Weighting
PGUP	Scroll Display Up	N/A	Set Key Compensation
PGDN	Scroll Display Down	N/A	Paddle sensitivity up
HOME	Return display to home	N/A	Paddle sensitivity down
TAB	Toggle Display view	Clear LCD Displays	Show Rx WPM
ESC	Abort/Cancel	N/A	N/A
INSERT	Pause Transmit	N/A	N/A

## Speed Pot Control

Hold Key	Speed Pot Adjusts
None	Sending speed
SHIFT	K40CW Rx Gain
ALT	Noise Filter
CTL	Rx spacing allowance

## Buffered Commands

CTL	Command	Syntax
C	Call Message	^C<msg>
D	Serial # -1	^D
I	Serial #+1	^I
K	Toggle Tx	^K
L	Load Loop Count	^L<nn> nn=count
M	Insert CR	^M
N	Play Serial#	^N
W	Wait	^W<nn> nn=seconds
Z	DECSZ Loop	^Z